



PILLOW BLOCK

Ball Bearing, Die-Cast Housing, Rigid Type **PBDC-BL - Series** Page 4

Ball Bearing, Pressed Steel Housing, Self-Aligning, Standard Type **PBPS-BL - Series** Page 4

Ball Bearing, Pressed Steel Housing, Self-Aligning, Heavy Gauge Type **PBPH-BL - Series** Page 4

Bronze Bearing, Die-Cast Housing, Rigid Type **PBDC-BR - Series** Page 4

Bronze Bearing, Pressed Steel Housing, Self-Aligning Type **PBPS-BR - Series** Page 5

UHMW-PE Bearing, Solid-Rigid Type **PBUH-UH - Series** Page 5

UHMW-PE Bearing, Pressed Stainless Steel Housing, Self-Aligning Type **PBSS-UH - Series** Page 5

Replacement Parts Page 5

FLANGE MOUNT

Ball Bearing, Die-Cast Housing, Rigid Type (2 Bolt) **F2DC-BL - Series** Page 6

Ball Bearing, Pressed Steel Housing, Self-Aligning, Standard Type **F2PS-BL Series** Page 6

Ball Bearing, Pressed Steel Housing, Self-Aligning, Heavy Gauge Type **F2PH-BL - Series** Page 6

Bronze Bearing, Pressed Steel Housing, Self-Aligning Type **F2PS-BR - Series** Page 6

UHMW-PE Bearing, Pressed Stainless Steel Housing, Self-Aligning Type **F2SS-UH - Series** Page 6

Ball Bearing, Die-Cast Housing, Rigid Type (4 Bolt) **F4DC-BL - Series** Page 7

UHMW-PE Bearing, Solid-Rigid Type (4 Bolt) **F4UH-UH Series** Page 7

UHMW-PE Bearing, Solid-Rigid Type (2 Bolt) **F2UH-UH - Series** Page 7

SLEEVE BEARINGS

Bronze Sleeve Bearings Page 7

UHMW-PE Sleeve Bearings Page 7

BEARING KIT – 9

This set installs or removes internal bushings & bearings with I.D. 1-5/16" to 1-3/4" and O.D. 1-7/16" to 1-7/8". Set contains 1 driver & 7 adapters.



BEARING KIT – 22

This set installs or removes internal bushings & bearings with I.D. 3/8" to 1-1/2" and O.D. 7/16" to 1-3/8". Set contains 3 drivers & 16 adapters.



BEARING KIT – 18

This set installs or removes internal bushings & bearings and will notpeen the bushing end, scratch or mar. Set contains 9 adapters for I.D. sizes 1/2" to 1" in increments of 1/16" maximum O.D. of 1-1/8".

